



## Raychem RayClic-E-02

### WORLDWIDE HEADQUARTERS

Tel. 800-545-6258  
Tel. 650-216-1526  
Fax 800-527-5703  
Fax 650-474-7711  
thermal.info@pentair.com

### BELGIË / BELGIQUE

Tel. +32 16 21 35 02  
Fax +32 16 21 36 04  
salesbelux@pentair.com

### BULGARIA

Tel./fax +359 56 86 68 86  
fax +359 56 86 68 86  
salesee@pentair.com

### ČESKÁ REPUBLIKA

Tel. +420 241 009 215  
Fax +420 241 009 219  
czechinfo@pentair.com

### DANMARK

Tel. +45 70 11 04 00  
Fax +45 70 11 04 01  
salesdk@pentair.com

### DEUTSCHLAND

Tel. 0800 1818205  
Fax 0800 1818204  
salesde@pentair.com

### ESPAÑA

Tel. +34 902 125 307  
Fax +34 91 640 29 90  
ptm-sales-es@pentair.com

### FRANCE

Tél. 0800 906045  
Fax 0800 906003  
salesfr@pentair.com

### HRVATSKA

Tel. +385 1 605 01 88  
Fax +385 1 605 01 88  
salesee@pentair.com

### ITALIA

Tel. +39 02 577 61 51  
Fax +39 02 577 61 55 28  
salesit@pentair.com

### LIETUVA/LATVIJA/EESTI

Tel. +370 5 2136633  
Fax +370 5 2330084  
info.baltic@pentair.com

### MAGYARORSZÁG

Tel. +36 1 253 7617  
Fax +36 1 253 7618  
saleshu@pentair.com

### NEDERLAND

Tel. 0800 0224978  
Fax 0800 0224993  
salesnl@pentair.com

### NORGE

Tel. +47 66 81 79 90  
Fax +47 66 80 83 92  
salesno@pentair.com

### ÖSTERREICH

Tel. 0800 297410  
Fax 0800 297409  
info-ptm-at@pentair.com

### POLSKA

Tel. +48 22 331 29 50  
Fax +48 22 331 29 51  
salespl@pentair.com

### REPUBLIC OF KAZAKHSTAN

Tel. +7 495 926 18 85  
Fax +7 495 926 18 86  
saleskz@pentair.com

### РОССИЯ

Тел. +7 495 926 18 85  
Факс +7 495 926 18 86  
salesru@pentair.com

### SERBIA AND MONTENEGRO

Tel. +381 230 401 770  
Fax +381 230 401 770  
salesee@pentair.com

### SCHWEIZ / SUISSE

Tel. 0800 551308  
Fax 0800 551309  
info-ptm-ch@pentair.com

### SUOMI

Puh. 0800 11 67 99  
Telekopio 0800 11 86 74  
salesfi@pentair.com

### SVERIGE

Tel. +46 31 335 58 00  
Fax +46 31 335 58 99  
salesse@pentair.com

### TÜRKIYE

Tel. +90 530 977 64 67  
Fax +32 16 21 36 04  
ptm-sales-tr@pentair.com

### UNITED KINGDOM

Tel. 0800 969013  
Fax 0800 968624  
salesthermaluk@pentair.com








WWW.THERMAL.PENTAIR.COM

All Pentair trademarks and logos are owned by Pentair or its global affiliates. Pentair reserves the right to change specifications without prior notice.

© 2013 Pentair.

0  
10  
20  
30  
40  
50  
60  
70  
80  
90  
100  
110  
120  
130  
140  
150  
160  
170  
180  
190  
200

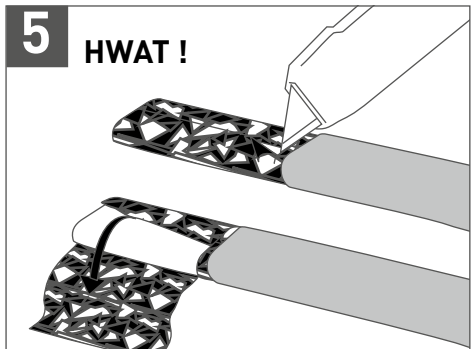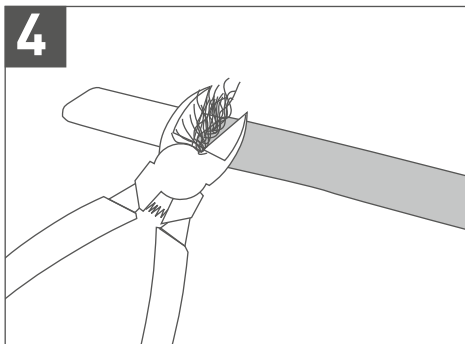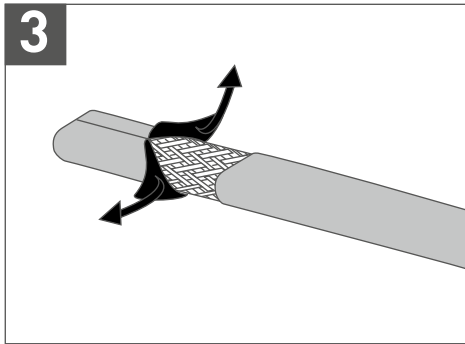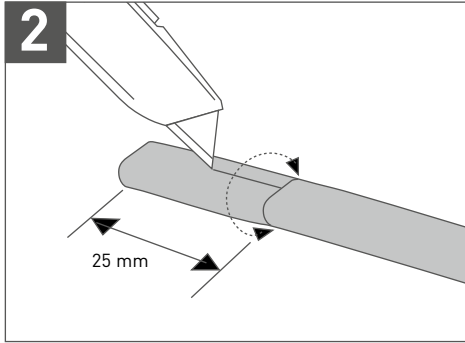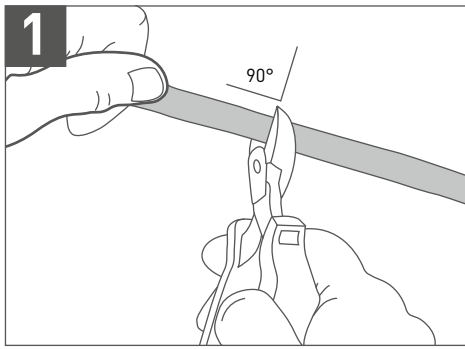

- Ⓒ GB HWAT cables only: remove aluminium wrap.
- Ⓓ Nur HWAT Heizbänder: Aluminiumfolie entfernen.
- Ⓕ F Rubans HWAT uniquement: enlever l'enveloppe en aluminium.
- Ⓖ NL Enkel HWAT-kabels: verwijder de aluminiumfolie.
- Ⓘ I Solo cavi HWAT: togliere il foglio di alluminio.
- Ⓒ S Endast HWAT-kablar: avlägsna aluminiumhöljet.
- Ⓓ N Kun HWAT kabler: Fjern aluminiumsfolien.
- Ⓓ DK Kun HWAT kabler: Fjern aluminiumsfolien.
- Ⓕ FIN Vain HWAT-johtimet: poista alumiinipäällys.

