


□ DC515 XX P2/BS


DE Contents **DE** Inhalt **FR** Contenu **NL** Inhoud **FI** Sisältö
 UK Contents **UK** Contento **ES** Contenido **PT** Conteúdo
 GR Περιεχόμενα **GR** İçerikler

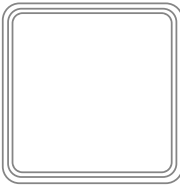

x1



x1

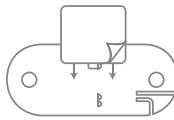

x1




x2










CR2032



x1

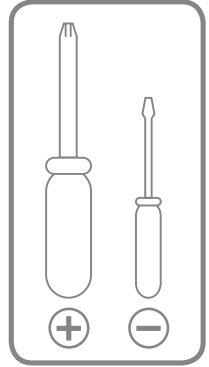







DE Getting started **DE** Erste Schritte **FR** Démarrage **NL** Aan de slag
 FI Aloitusopas **UK** Kom i gang **IT** Operazioni preliminari **ES** Para empezar
 PT Para começar **GR** Πρώτα βήματα **SE** Kom i gång

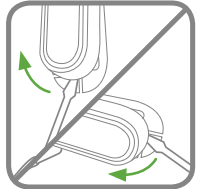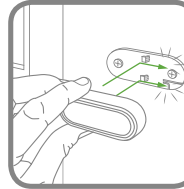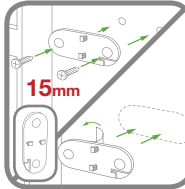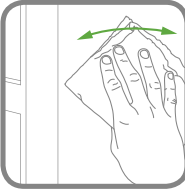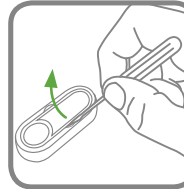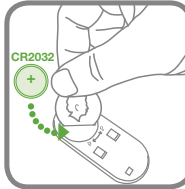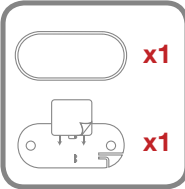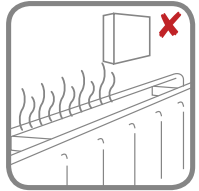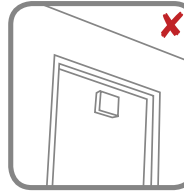



GB Optional features 05 Optionale Funktionen 06 Options disponibles 07 Opções disponíveis
 FI Valinnaiset ominaisuudet 08 Valgfrife Funktioner 09 Funzionalità opzionali 10 Opções disponibles
 PT Funções opcionais 08 Προαιρετικές λειτουργίες πρόσθετων 09 Möjliga funktioner



	Hello	Ding Dong	Westminster	Marimba	Piano	Bell	Telephone	Soft Alert
	•	•					•	•
	•	•	•	•			•	•
	•	•	•	•	•	•	•	•

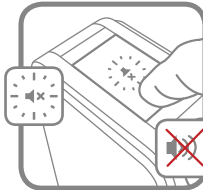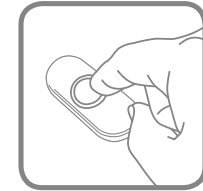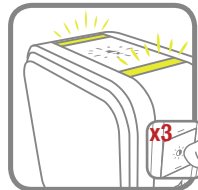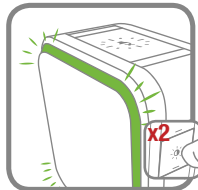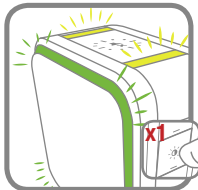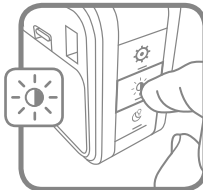

		3Hrs			6Hrs
		9Hrs			12Hrs

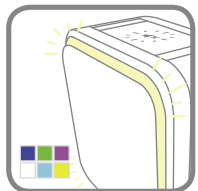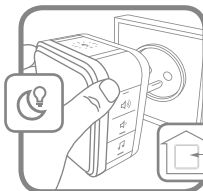

GB Trouble shooting 09 Fehlerbehebung 08 Dépannage 09 Probleemoplossing
 FI Vianmääritys 08 Problemlösning 09 Risoluzione dei problemi 10 Solución de problemas
 PT Resolução de problemas 08 Αντιμετώπιση προβλημάτων 09 Felsökning

livewell.honeywell.com

