ENG Product description Xpress



Mounting

Xpress is equipped with magnets for easy attachment to the mounting plate. The mounting plate is included.



Technical data

Size

90 x 90 x 12mm

Colour

White and black

Range


Up to 60 metres in an open space

Battery (included)

CR2430 lithium button cell battery

Battery life

2-5 years, depending on usage

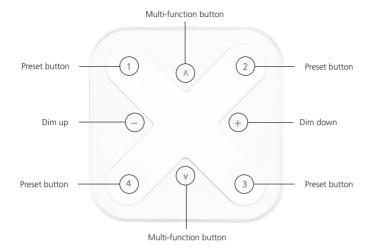

The preset buttons on the Xpress can be configured via the Casambi app. A light indicates the selected preset.

Dim up, dim down

Soft dimming of the last selected preset

Multi-function buttons

- Change the colour temperature with 25 Kelvin
- Change of the Indirect/direct relationship

Preset buttons

- Individual control of light fixtures
- Group control
- Control of all lights
- Create scenarios
- Create animations

Smart functions

Dimmina

Hold the "Dim down" or "Dim up" button

- Soft dimming of the last selected preset, cycle takes 5 seconds

Press the "Dim down" button - selected preset goes to 0%

Press the "Dim up" button - selected preset goes to 100%

Preset buttons

Press - The selected preset (light control, group control, all lights, scene creator or animation creator) is switched on.

Press again - The selected preset (light control, group control, all lights, scene creator or animation creator) switches off.

Colour temperature

Hold down the multifunctionbutton - To softly change the colour temperature, cycle takes 5 seconds

Press the upper multifunction button - To change to the warmest colour temperature

Press the lower multifunction button - To change to the coolest colour temperature

Indirect/direct relationship*

Hold down the upper multifunction button

- To softly dim up the indirect light, cycle takes 5 seconds

Hold down the lower multifunction button

- To softly dim up the direct light, cycle takes 5 seconds

Press the upper multifunction button - The indirect part reaches its maximum level

Press the lower multifunction button - The direct part reaches its maximum level

*the sum of indirect/direct remains at 100%

Switch off

Press the "Dim down" and "Dim up" buttons simultaneously for more than 1 second - To turn off all light sources on the selected network

Unpairing

Press any button for more than 5 seconds -The device appears temporarily among nearby devices ready to unpair it.



Hilma Anderssons gata 15, 421 31 Västra Frölunda order@vadsbo.net • www.vadsbo.net

