



# ASENNUSOHJEET INSTALLATIONS INSTRUKTIONER INSTALLATION INSTRUCTIONS

**SA316  
SA325**

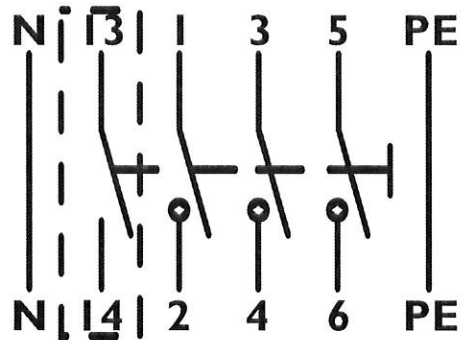

Vridmoment  
Torq screw  
1,2Nm

APUKONTAKTI  
**H** = HJÄLPKONTAKT  
AUXILIARY CONTACT

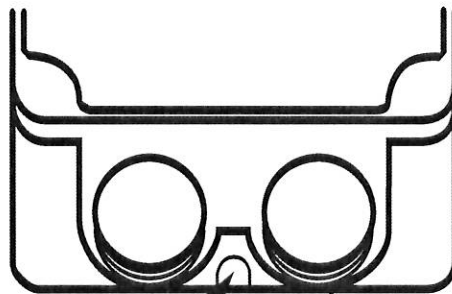


Ø 6MM DRILL  
VEDENPOISTO  
DRÄNERING  
DRAINAGE



KNOCK OUT  
METRINEN  
METRISKA  
METRIC

# ASENNUSOHJEET INSTALLATIONS INSTRUKTIONER INSTALLATION INSTRUCTIONS

**SA616 / SA625**

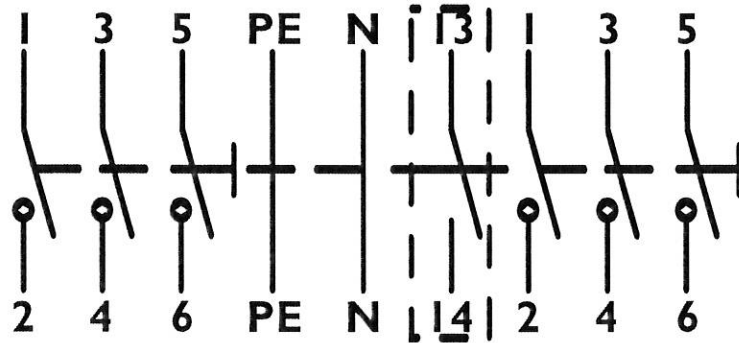

**H =** APUKONTAKTI  
HJÄLPKONTAKT  
AUXILIARY CONTACT



**Ø 6MM DRILL**

**VEDENPOISTO  
DRÄNERING  
DRAINAGE**

**KNOCK OUT**

