

Sense



30V DC, CC (Constant current), 3/4000lm: max 1050mA (31,5W), 5000lm: max 1400mA (42W)

Sense Panel:

IP40

Sense Driver Kit:

700/1050mA =

1400mA =

IP20

Non Dim and Phase Dim

DALI

(Sold separatly)

Sense Panels & Driver Kits

	CRI (Ra)	SDCM (Steps)	BA (°)	SENSE 3000lm DRIVER KIT PHASE DIM (700mA)	SENSE 4000lm DRIVER KIT NON DIM (1050mA)	SENSE 5000lm DRIVER KIT NON DIM (1400mA)	SENSE 3000lm DRIVER KIT DALI (700mA)	SENSE 4000lm DRIVER KIT DALI (1050mA)	SENSE 5000lm DRIVER KIT DALI (1400mA)
SENSE OPAL 3/4000lm LED 3000K	80	3	110	2700lm/UGR<22 21W/129lm/W	4000lm/UGR<22 31,5W/127lm/W	×	2700lm/UGR<22 21W/129lm/W	4000lm/UGR<22 31,5W/127lm/W	×
SENSE OPAL 3/4000lm LED 4000K	80	3	110	2800lm/UGR<22 21W/133lm/W	4100lm/UGR<22 31,5W/130lm/W	×	2800lm/UGR<22 21W/133lm/W	4100lm/UGR<22 31,5W/130lm/W	×
SENSE OPAL 5000lm LED 3000K	80	3	110	2650lm/UGR<22 21W/126lm/W	3900lm/UGR<22 31,5W/124lm/W	5000lm/UGR<22 42W/119lm/W	2650lm/UGR<22 21W/126lm/W	3900lm/UGR<22 31,5W/124lm/W	5000lm/UGR<22 42W/119lm/W
SENSE OPAL 5000lm LED 4000K	80	3	110	2750lm/UGR<22 21W/131 lm/W	4000lm/UGR<22 31,5W/127lm/W	5100lm/UGR<22 42W/121lm/W	2750lm/UGR<22 21W/131 lm/W	4000lm/UGR<22 31,5W/127lm/W	5100lm/UGR<22 42W/121lm/W
SENSE PRISM 3/4000lm LED 3000K	80	3	90	2650lm/UGR<17 21W/126lm/W	3950lm/UGR<19 31,5W/125lm/W	×	2650lm/UGR<17 21W/126lm/W	3950lm/UGR<19 31,5W/125lm/W	×
SENSE PRISM 3/4000lm LED 4000K	80	3	90	2750lm/UGR<17 21W/131lm/W	4050lm/UGR<19 31,5W/129lm/W	×	2750lm/UGR<17 21W/131lm/W	4050lm/UGR<19 31,5W/129lm/W	×
SENSE PRISM 5000lm LED 3000K	80	3	90	2650lm/UGR<17 21W/126lm/W	3750lm/UGR<17 31,5W/119lm/W	4500lm/UGR<19 42W/107lm/W	2650lm/UGR<17 21W/126lm/W	3750lm/UGR<17 31,5W/119lm/W	4500lm/UGR<19 42W/107lm/W
SENSE PRISM 5000lm LED 4000K	80	3	90	2750lm/UGR<17 21W/131lm/W	3750lm/UGR<17 31,5W/119lm/W	4600lm/UGR<19 42W/110lm/W	2750lm/UGR<17 21W/131lm/W	3750lm/UGR<17 31,5W/119lm/W	4600lm/UGR<19 42W/110lm/W

Above efficiency calculations are excl. driver.
Incl. driver: 7-14% loss depending on driver

(Rev.:14.02.17)



NO: Kan kun installeres av en registrert installasjonsvirksomhet
 EN: Only to be installed by an authorized electrician
 FR: Doit être installé par un électricien autorisé
 NL: Mag alleen geïnstalleerd worden door een bevoegde elektricien
 DE: Dieses Produkt darf nur durch autorisiertes Personal (z. B. Elektro-Installateur) angeschlossen und in Betrieb genommen werden

Rev: 14.02.2017

CORPORATE OFFICE:
SG Armaturen AS
 Svåbekk 15
 4790 Lillesand
 NORGE

BRANCH OFFICE:
 SG Lighting SA/NV
 Blokhuisstraat 47
 2800 Mechelen Noord I
 BELGIQUE/BELGIË

Tlf:+32(0) 15 20 72 71
 info.benelux@silighting.net
 www.silighting.net

BRANCH OFFICE:
 SG Armaturen A/S
 Egebakken 19
 7400 Herning
 DANMARK

Tlf:+45 70 70 72 13
 info@sg-as.dk
 www.sg-as.dk

BRANCH OFFICE:
 SG Lighting SA/NV
 73 rue de Saint Mandrier
 83140 Six Fours Les Plages
 FRANCE

Tlf:+33(0) 4 94 93 00 00
 info.france@silighting.fr
 www.silighting.net


BRANCH OFFICE:
 SG Leuchten GmbH
 Postfach 67 04 21
 22344 Hamburg
 GERMANY

Tlf:+49 40 23 99 44 59
 info@sg-leuchten.de
 www.sg-leuchten.de

BRANCH OFFICE:
 SG Armaturen AB
 August Barksg. 30B
 421 32 Västra Frölunda
 SVERIGE

Tlf:+46 31 81 71 10
 info@sg-ab.se
 www.sg-ab.se




Tlf:+47 37 50 03 00
 firmapost@sg-as.no
 www.sg-as.no

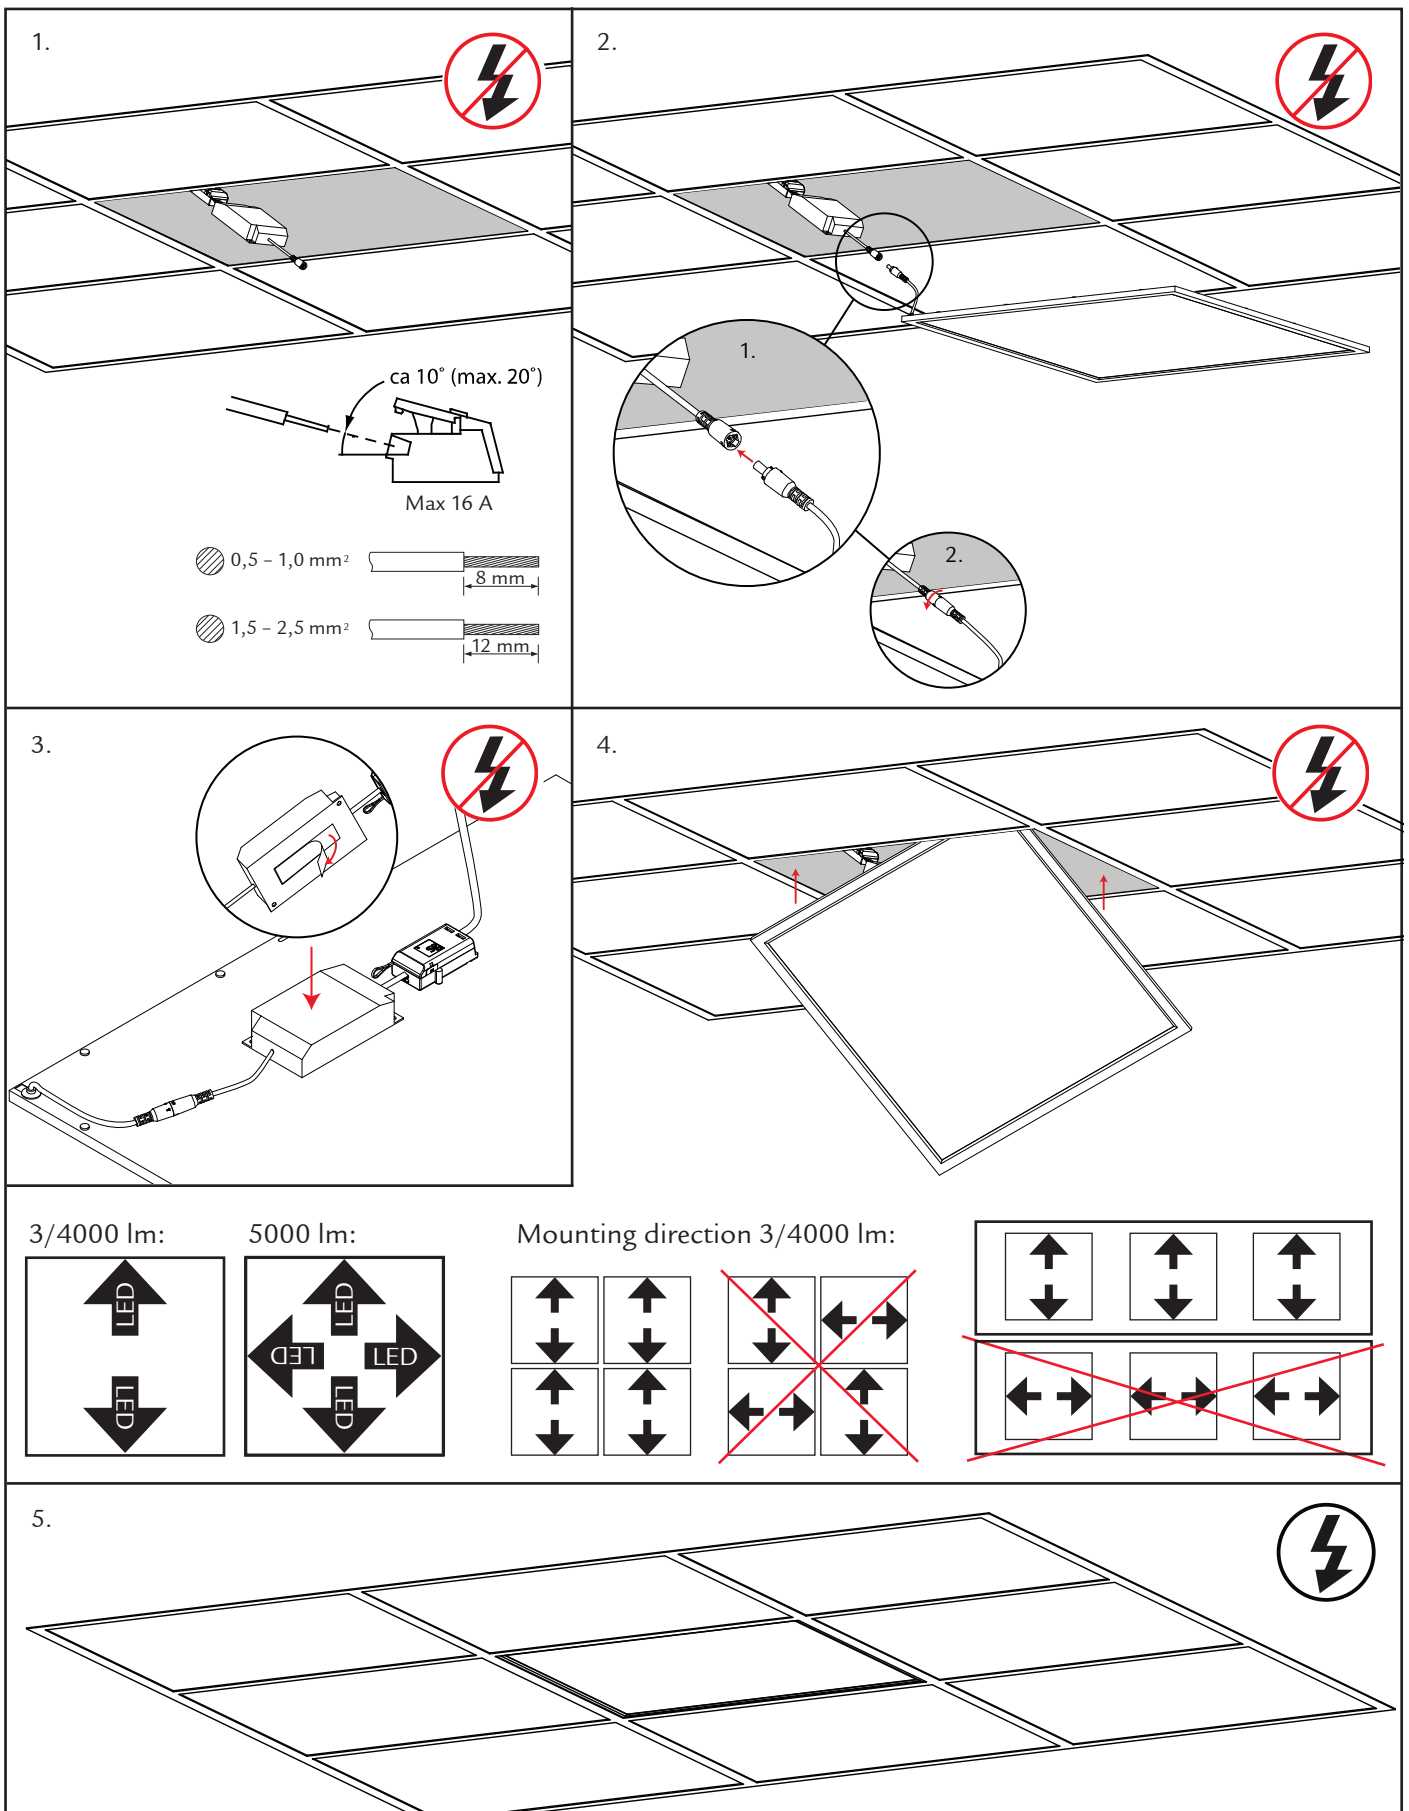

Sense 300x1200



30V DC, CC (Constant current), 3/4000lm, max 1050mA
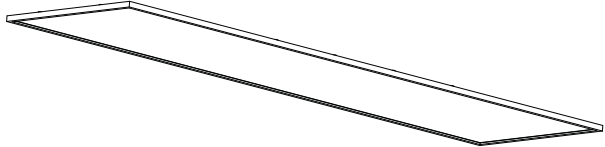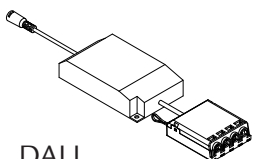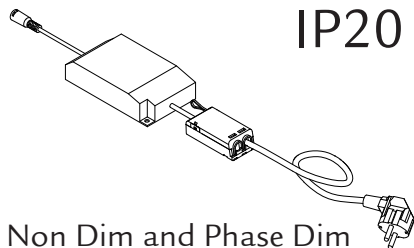
<p>Sense 300x1200:</p>  <p style="text-align: right;">IP40</p>	<p>Sense Driver Kit 700/1050mA:</p> <p>(Sold separatly)</p>  <p style="text-align: center;">DALI</p>  <p style="text-align: center;">Non Dim and Phase Dim</p> <p style="text-align: right;">IP20</p>
--------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------


Sense Panels & Driver Kits




	CRI (Ra)	SDCM (Steps)	BA (°)	SENSE 3000lm DRIVER KIT PHASE DIM (700mA)	SENSE 4000lm DRIVER KIT NON DIM (1050mA)	SENSE 3000lm DRIVER KIT DALI (700mA)	SENSE 4000lm DRIVER KIT DALI (1050mA)
SENSE OPAL 3/4000lm LED 3000K	80	4	110	2700lm/UGR<19 22W/123lm/W	4000lm/UGR<19 33W/121lm/W	2700lm/UGR<19 22W/123lm/W	4000lm/UGR<19 22W/123lm/W
SENSE OPAL 3/4000lm LED 4000K	80	4	110	2850lm/UGR<19 22W/129lm/W	4200lm/UGR<19 33W/127lm/W	2850lm/UGR<19 22W/129lm/W	4200lm/UGR<19 33W/127lm/W
SENSE PRISM 3/4000lm LED 3000K	80	4	90	2400lm/UGR<17 22W/109lm/W	3600lm/UGR<17 33W/109lm/W	2400lm/UGR<17 22W/109lm/W	3600lm/UGR<17 33W/109lm/W
SENSE PRISM 3/4000lm LED 4000K	80	4	90	2700lm/UGR<17 22W/122lm/W	4000lm/UGR<17 33W/121lm/W	2700lm/UGR<17 22W/122lm/W	4000lm/UGR<17 33W/121lm/W

Above efficiency calculations are excl. driver.
Incl. driver: 7-14% loss depending on driver

(Rev.: 22.03.17)

Mounting direction:

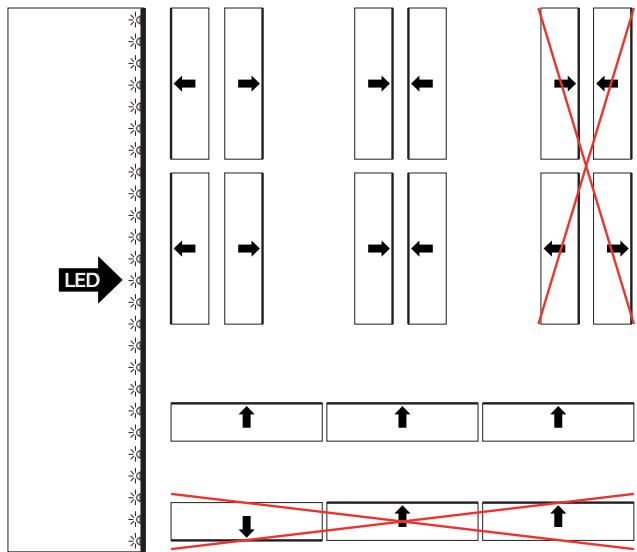

NO: Kan kun installeres av en registrert installasjonsvirksomhet
EN: Only to be installed by an authorized electrician
FR: Doit être installé par un électricien autorisé
NL: Mag alleen geïnstalleerd worden door een bevoegde elektricien
DE: Dieses Produkt darf nur durch autorisiertes Personal (z. B. Elektro-Installateur) angeschlossen und in Betrieb genommen werden

CORPORATE OFFICE:
SG Armaturen AS
Svåbekk 15
4790 Lillesand
NORGE

BRANCH OFFICE:
SG Lighting SA/NV
Blokhuistraat 47
2800 Mechelen Noord I
BELGIQUE/BELGIË

Tlf:+32(0) 15 20 72 71
info.benelux@sglighting.net
www.sglighting.net

BRANCH OFFICE:
SG Armaturen A/S
Egebakken 19
7400 Herning
DANMARK

Tlf:+45 70 70 72 13
info@sg-as.dk
www.sg-as.dk

BRANCH OFFICE:
SG Lighting SA/NV
73 rue de Saint Mandrier
83140 Six Fours Les Plages
FRANCE

Tlf:+33(0) 4 94 93 00 00
info.france@sglighting.fr
www.sglighting.net






BRANCH OFFICE:
SG Leuchten GmbH
Postfach 67 04 21
22344 Hamburg
GERMANY

Tlf:+49 40 23 99 44 59
info@sg-leuchten.de
www.sg-leuchten.de

BRANCH OFFICE:
SG Armaturen AB
August Barksg. 30B
421 32 Västra Frölunda
SVERIGE

Tlf:+46 31 81 71 10
info@sg-ab.se
www.sg-ab.se

Tlf:+47 37 50 03 00
firmapost@sg-as.no
www.sg-as.no

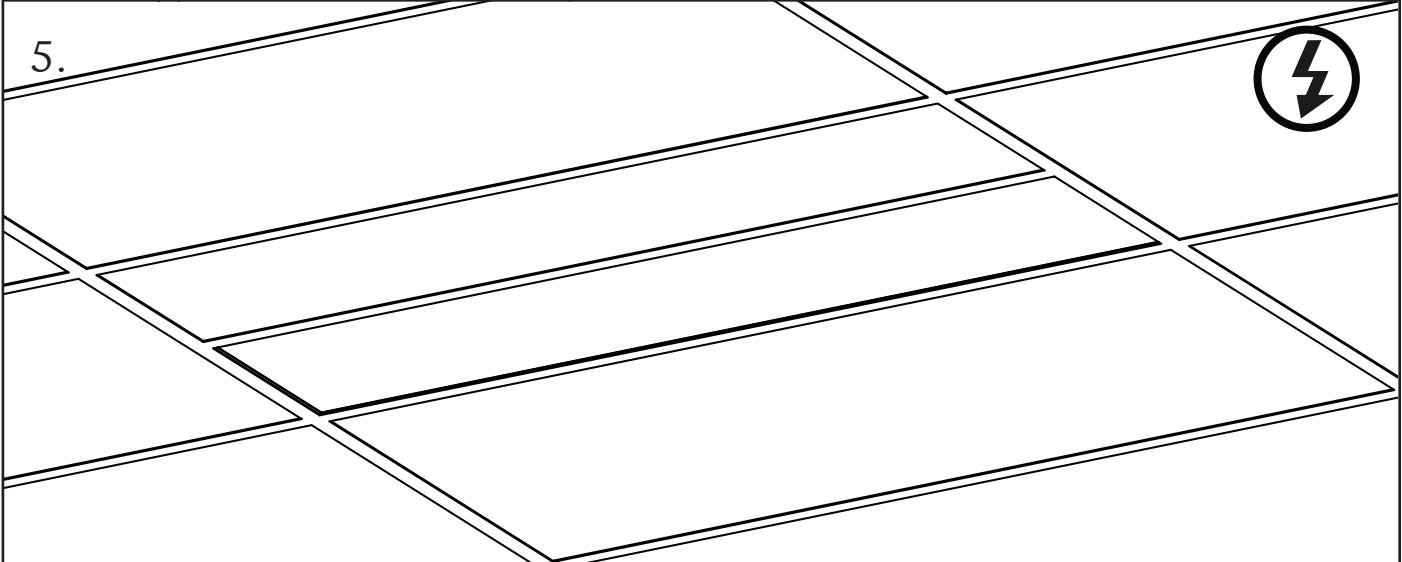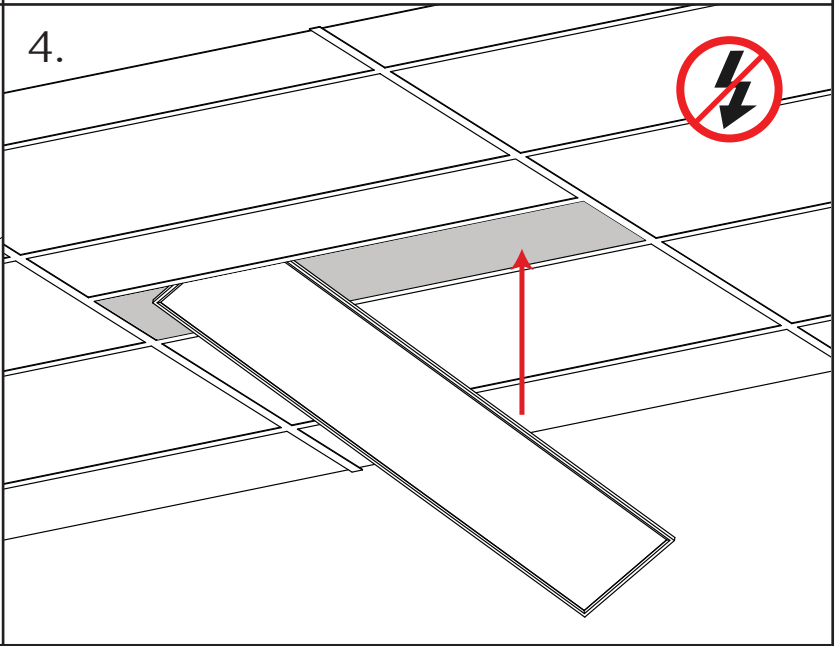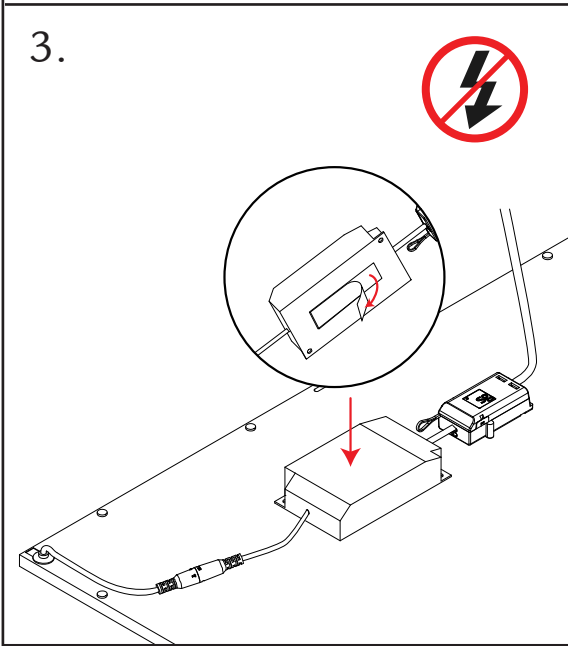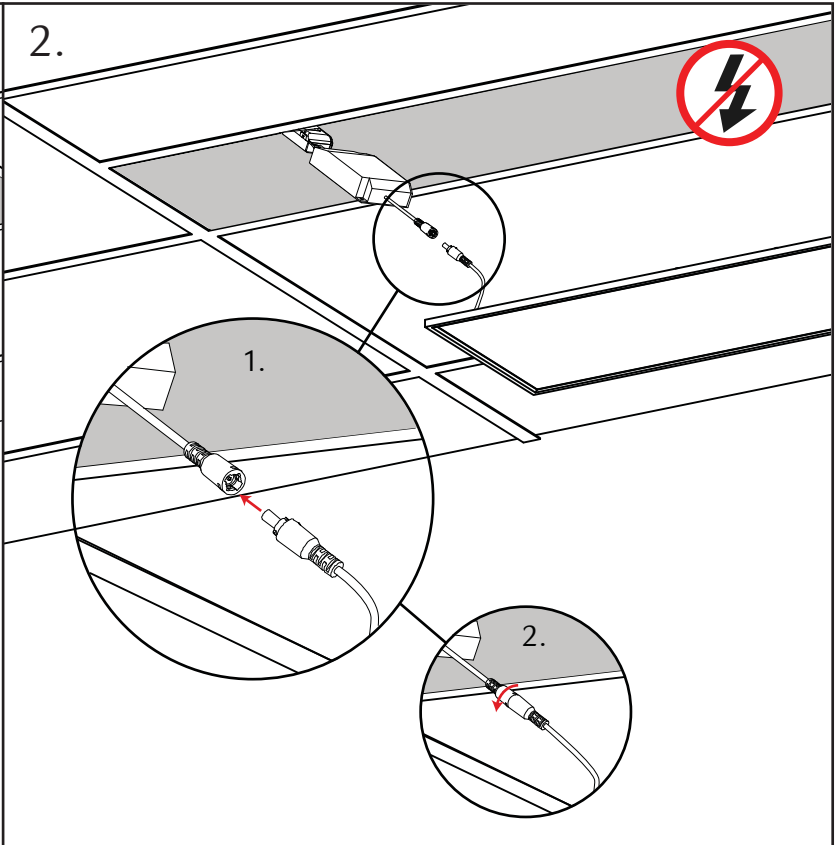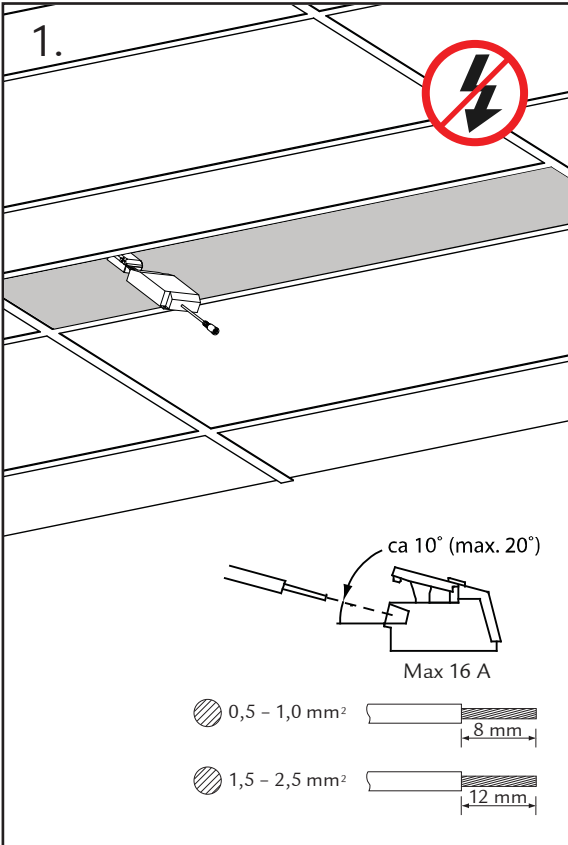

Sense Frame



Sense Panel & Driver Kit sold separately:

1)

2)

3)

4)

5)

6)

7)

Rev: 22.02.2017

CORPORATE OFFICE:
SG Armaturen AS
 Svåbekk 15
 4790 Lillesand
 NORGE

BRANCH OFFICE:
 SG Lighting SA/NV
 Blokhuisstraat 47
 2800 Mechelen Noord I
 BELGIQUE/BELGIË

Tlf:+32(0) 15 20 72 71
 info.benelux@sglighting.net
 www.sglighting.net

BRANCH OFFICE:
 SG Armaturen A/S
 Egebakken 19
 7400 Herning
 DANMARK

Tlf:+45 70 70 72 13
 info@sg-as.dk
 www.sg-as.dk

BRANCH OFFICE:
 SG Lighting SA/NV
 73 rue de Saint Mandrier
 83140 Six Fours Les Plages
 FRANCE

Tlf:+33(0) 4 94 93 00 00
 info.france@sglighting.fr
 www.sglighting.net

BRANCH OFFICE:
 SG Leuchten GmbH
 Postfach 67 04 21
 22344 Hamburg
 GERMANY


Tlf:+49 40 23 99 44 59
 info@sg-leuchten.de
 www.sg-leuchten.de

BRANCH OFFICE:
 SG Armaturen AB
 August Barksg. 30B
 421 32 Västra Frölunda
 SVERIGE

Tlf:+46 31 81 71 10
 info@sg-ab.se
 www.sg-ab.se

Tlf:+47 37 50 03 00
 firmapost@sg-as.no
 www.sg-as.no

Sense Suspension Kit

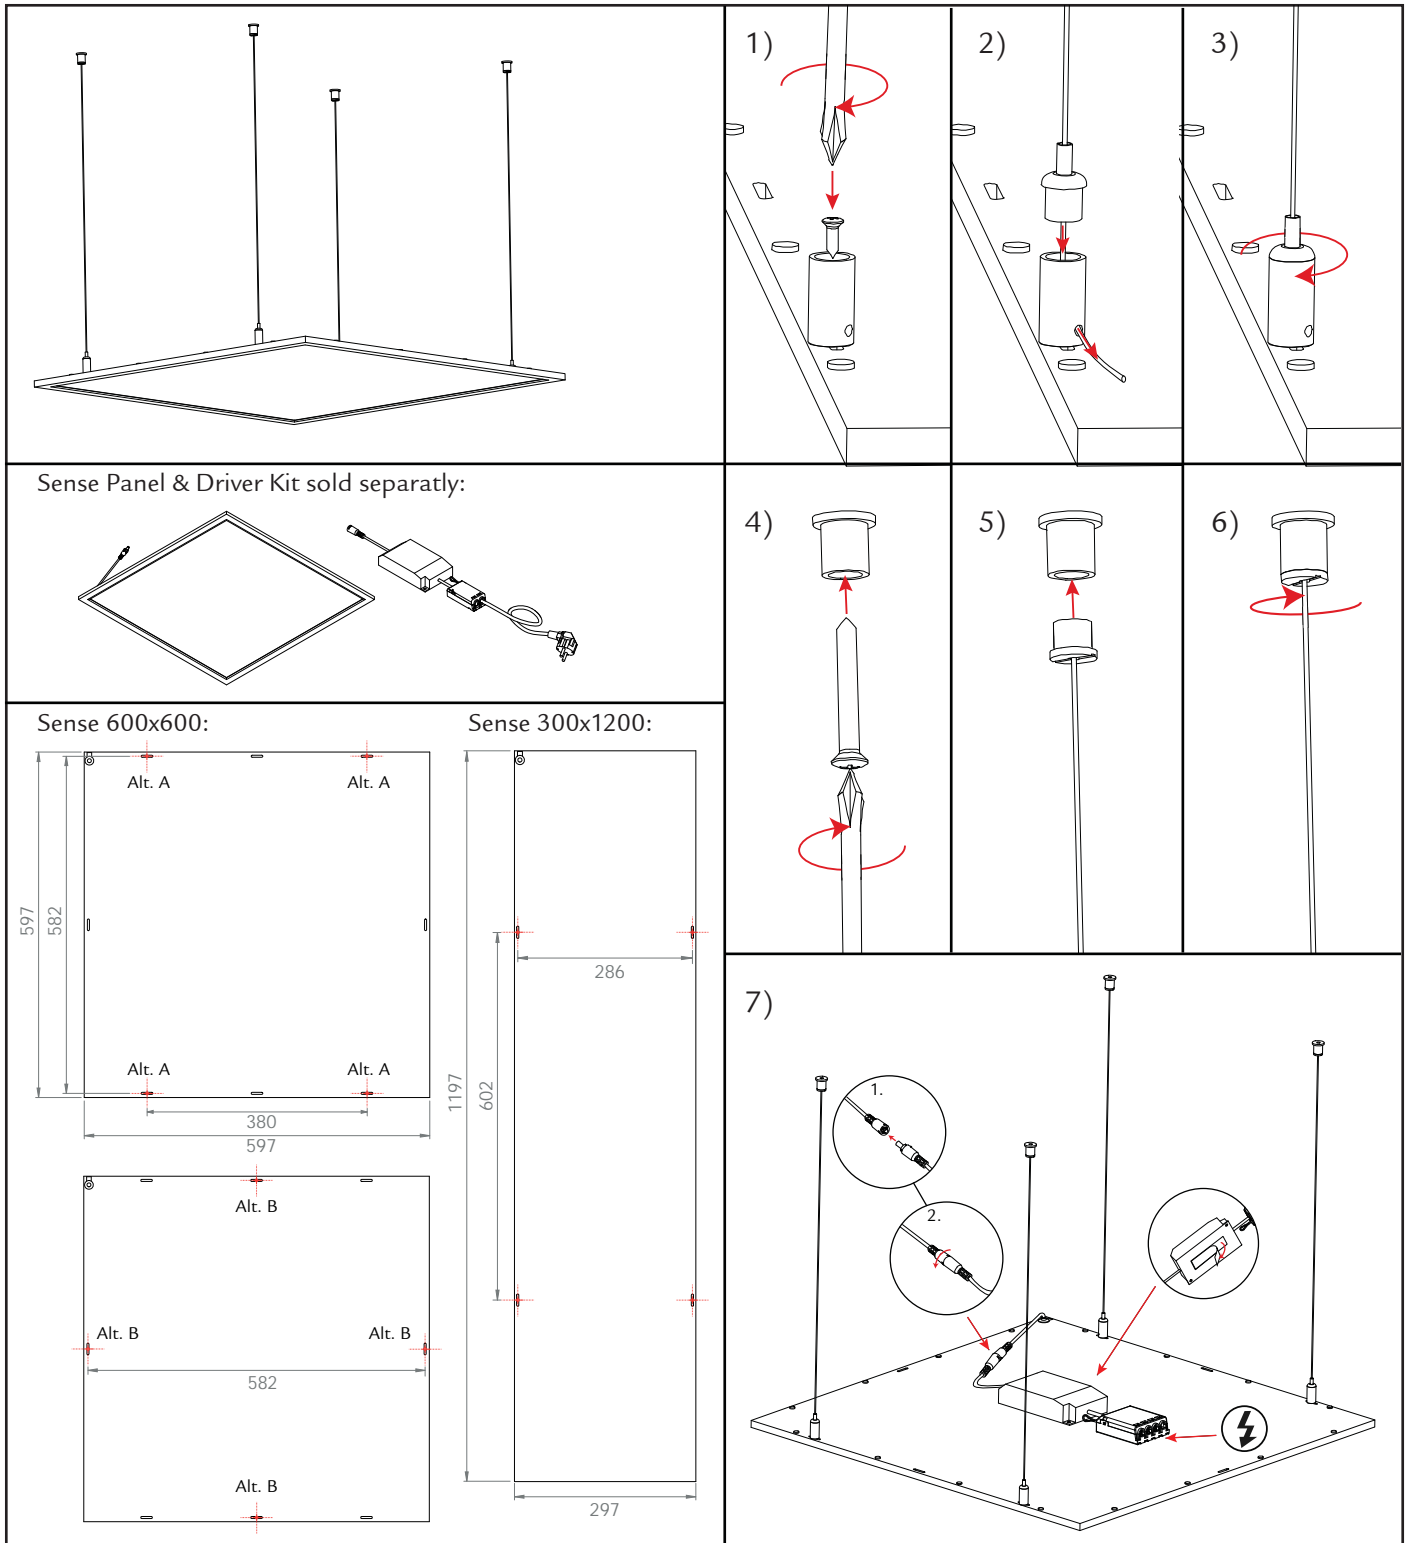

Rev: 03.04.2017

CORPORATE OFFICE:
SG Armaturen AS
 Svåbekk 15
 4790 Lillesand
 NORGE

BRANCH OFFICE:
 SG Lighting SA/NV
 Blokhuisstraat 47
 2800 Mechelen Noord I
 BELGIQUE/BELGIË

Tlf:+32(0) 15 20 72 71
 info.benelux@sglighting.net
 www.sglighting.net

BRANCH OFFICE:
 SG Armaturen A/S
 Egebakken 19
 7400 Herning
 DANMARK

Tlf:+45 70 70 72 13
 info@sg-as.dk
 www.sg-as.dk

BRANCH OFFICE:
 SG Lighting SA/NV
 73 rue de Saint Mandrier
 83140 Six Fours Les Plages
 FRANCE

Tlf:+33(0) 4 94 93 00 00
 info.france@sglighting.fr
 www.sglighting.net

BRANCH OFFICE:
 SG Leuchten GmbH
 Postfach 67 04 21
 22344 Hamburg
 GERMANY

Tlf:+49 40 23 99 44 59
 info@sg-leuchten.de
 www.sg-leuchten.de

BRANCH OFFICE:
 SG Armaturen AB
 August Barksg. 30B
 421 32 Västra Frölunda
 SVERIGE

Tlf:+46 31 81 71 10
 info@sg-ab.se
 www.sg-ab.se


Tlf:+47 37 50 03 00
 firmapost@sg-as.no
 www.sg-as.no

Sense 3000lm Driver Kit Phase Dim




30V DC, CC (Constant current) 700mA

Sense Driver Kit:

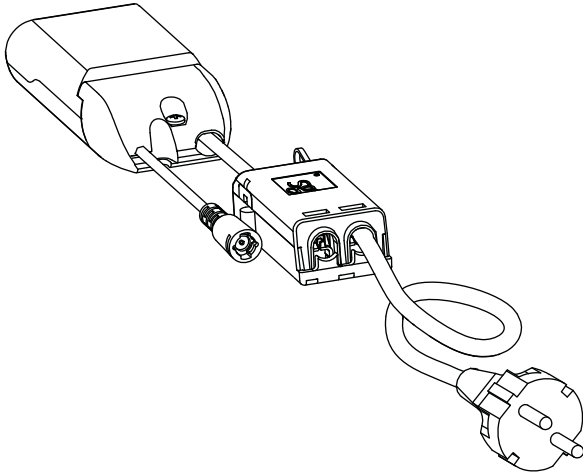

Sense Panel:

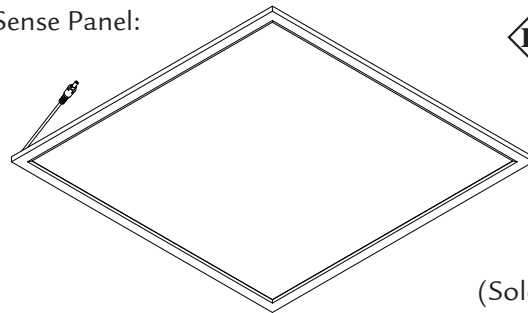


IP40

(Sold separately)


700mA (25W)

SENSE OPAL 3/4000lm 3000K	2700lm
SENSE OPAL 3/4000lm 4000K	2800lm
SENSE OPAL 5000lm 3000K	2650lm
SENSE OPAL 5000lm 4000K	2750lm
SENSE PRISM 3/4000lm 3000K	2650lm
SENSE PRISM 3/4000lm 4000K	2750lm
SENSE PRISM 5000lm 3000K	2650lm
SENSE PRISM 5000lm 4000K	2750lm

1.)

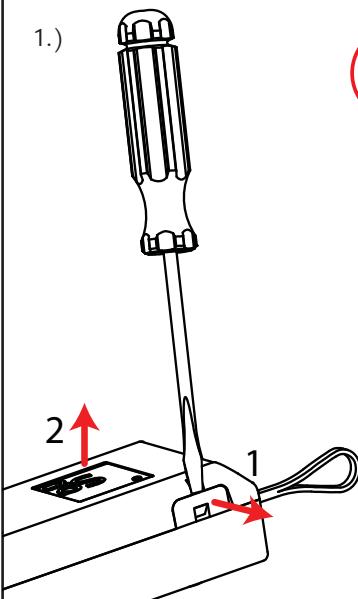

2.)

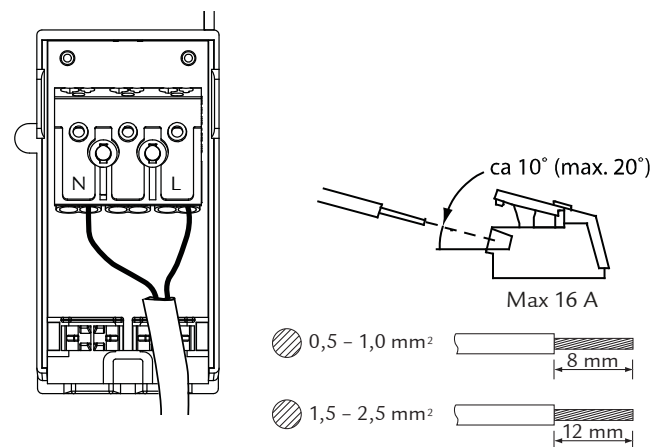

NO: Kan kun installeres av en registrert installasjonsvirksomhet
 EN: Only to be installed by an authorized electrician
 FR: Doit être installé par un électricien autorisé
 NL: Mag alleen geïnstalleerd worden door een bevoegde elektricien
 DE: Dieses Produkt darf nur durch autorisiertes Personal (z. B. Elektro-Installateur) angeschlossen und in Betrieb genommen werden

CORPORATE OFFICE:
SG Armaturen AS
 Svåbekk 15
 4790 Lillesand
 NORGE

Tlf:+47 37 50 03 00
 firmapost@sg-as.no
 www.sg-as.no

BRANCH OFFICE:
 SG Lighting SA/NV
 Blokhuisstraat 47
 2800 Mechelen Noord I
 BELGIQUE/BELGIË

Tlf:+32(0) 15 20 72 71
 info.benelux@sglighting.net
 www.sglighting.net

BRANCH OFFICE:
 SG Armaturen A/S
 Egebakken 19
 7400 Herning
 DANMARK

Tlf:+45 70 70 72 13
 info@sg-as.dk
 www.sg-as.dk

BRANCH OFFICE:
 SG Lighting SA/NV
 73 rue de Saint Mandrier
 83140 Six Fours Les Plages
 FRANCE

Tlf:+33(0) 4 94 93 00 00
 info.france@sglighting.fr
 www.sglighting.net

BRANCH OFFICE:
 SG Leuchten GmbH
 Postfach 67 04 21
 22344 Hamburg
 GERMANY

Tlf:+49 40 23 99 44 59
 info@sg-leuchten.de
 www.sg-leuchten.de

BRANCH OFFICE:
 SG Armaturen AB
 August Barksg. 30B
 421 32 Västra Frölunda
 SVERIGE




Tlf:+46 31 81 71 10
 info@sg-ab.se
 www.sg-ab.se

Rev: 17.02.2017

Sense 3000lm Driver Kit DALI



30V DC, CC (Constant current) 700mA

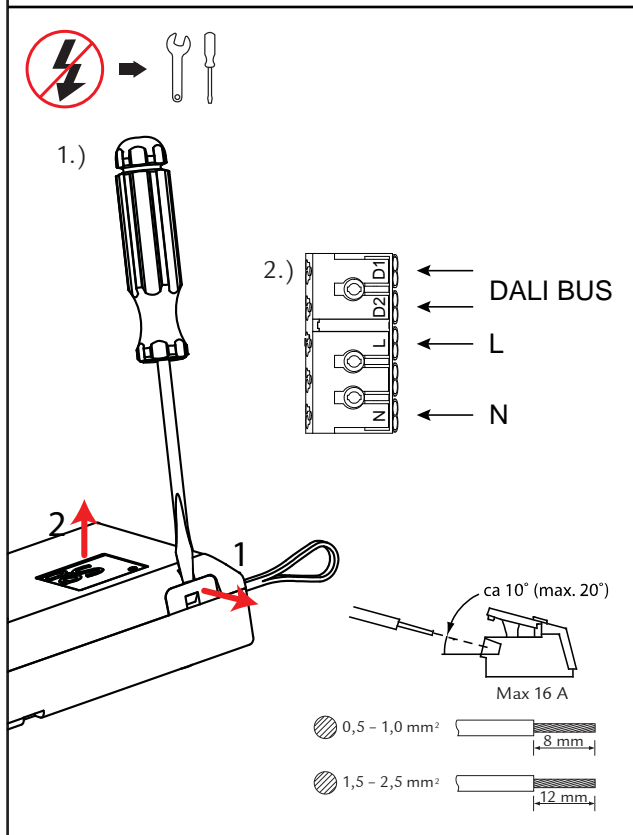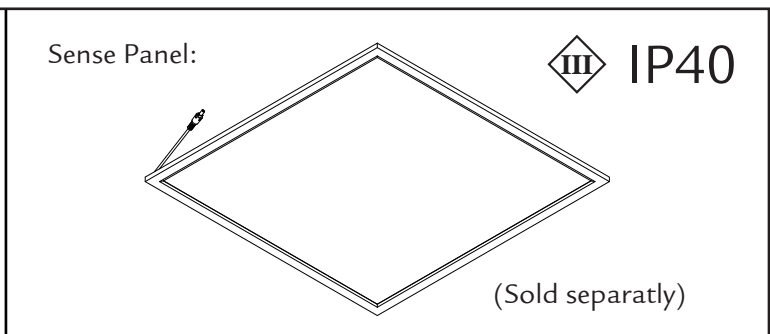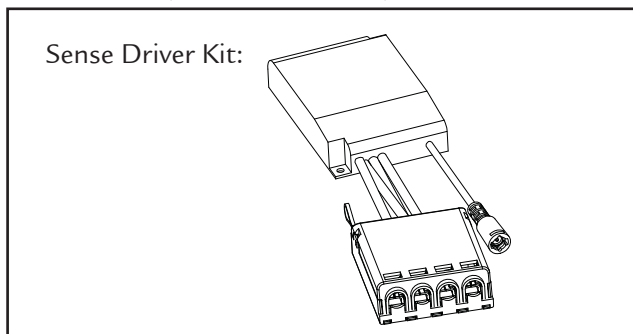

250mA (12W)	500mA (24W)	700mA (32W)																																																
<input type="checkbox"/> ON 1 2 3 4 5 6	<input type="checkbox"/> ON 1 2 3 4 5 6	<input type="checkbox"/> ON 1 2 3 4 5 6																																																
<table border="1"> <tr><td>SENSE OPAL 3/4000lm 3000K</td><td>960lm</td></tr> <tr><td>SENSE OPAL 3/4000lm 4000K</td><td>1000lm</td></tr> <tr><td>SENSE OPAL 5000lm 3000K</td><td>950lm</td></tr> <tr><td>SENSE OPAL 5000lm 4000K</td><td>980lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 3000K</td><td>950lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 4000K</td><td>980lm</td></tr> <tr><td>SENSE PRISM 5000lm 3000K</td><td>950lm</td></tr> <tr><td>SENSE PRISM 5000lm 4000K</td><td>980lm</td></tr> </table>	SENSE OPAL 3/4000lm 3000K	960lm	SENSE OPAL 3/4000lm 4000K	1000lm	SENSE OPAL 5000lm 3000K	950lm	SENSE OPAL 5000lm 4000K	980lm	SENSE PRISM 3/4000lm 3000K	950lm	SENSE PRISM 3/4000lm 4000K	980lm	SENSE PRISM 5000lm 3000K	950lm	SENSE PRISM 5000lm 4000K	980lm	<table border="1"> <tr><td>SENSE OPAL 3/4000lm 3000K</td><td>1930lm</td></tr> <tr><td>SENSE OPAL 3/4000lm 4000K</td><td>2000lm</td></tr> <tr><td>SENSE OPAL 5000lm 3000K</td><td>1890lm</td></tr> <tr><td>SENSE OPAL 5000lm 4000K</td><td>1960lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 3000K</td><td>1890lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 4000K</td><td>1960lm</td></tr> <tr><td>SENSE PRISM 5000lm 3000K</td><td>1890lm</td></tr> <tr><td>SENSE PRISM 5000lm 4000K</td><td>1960lm</td></tr> </table>	SENSE OPAL 3/4000lm 3000K	1930lm	SENSE OPAL 3/4000lm 4000K	2000lm	SENSE OPAL 5000lm 3000K	1890lm	SENSE OPAL 5000lm 4000K	1960lm	SENSE PRISM 3/4000lm 3000K	1890lm	SENSE PRISM 3/4000lm 4000K	1960lm	SENSE PRISM 5000lm 3000K	1890lm	SENSE PRISM 5000lm 4000K	1960lm	<table border="1"> <tr><td>SENSE OPAL 3/4000lm 3000K</td><td>2700lm</td></tr> <tr><td>SENSE OPAL 3/4000lm 4000K</td><td>2800lm</td></tr> <tr><td>SENSE OPAL 5000lm 3000K</td><td>2650lm</td></tr> <tr><td>SENSE OPAL 5000lm 4000K</td><td>2750lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 3000K</td><td>2650lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 4000K</td><td>2750lm</td></tr> <tr><td>SENSE PRISM 5000lm 3000K</td><td>2650lm</td></tr> <tr><td>SENSE PRISM 5000lm 4000K</td><td>2750lm</td></tr> </table>	SENSE OPAL 3/4000lm 3000K	2700lm	SENSE OPAL 3/4000lm 4000K	2800lm	SENSE OPAL 5000lm 3000K	2650lm	SENSE OPAL 5000lm 4000K	2750lm	SENSE PRISM 3/4000lm 3000K	2650lm	SENSE PRISM 3/4000lm 4000K	2750lm	SENSE PRISM 5000lm 3000K	2650lm	SENSE PRISM 5000lm 4000K	2750lm
SENSE OPAL 3/4000lm 3000K	960lm																																																	
SENSE OPAL 3/4000lm 4000K	1000lm																																																	
SENSE OPAL 5000lm 3000K	950lm																																																	
SENSE OPAL 5000lm 4000K	980lm																																																	
SENSE PRISM 3/4000lm 3000K	950lm																																																	
SENSE PRISM 3/4000lm 4000K	980lm																																																	
SENSE PRISM 5000lm 3000K	950lm																																																	
SENSE PRISM 5000lm 4000K	980lm																																																	
SENSE OPAL 3/4000lm 3000K	1930lm																																																	
SENSE OPAL 3/4000lm 4000K	2000lm																																																	
SENSE OPAL 5000lm 3000K	1890lm																																																	
SENSE OPAL 5000lm 4000K	1960lm																																																	
SENSE PRISM 3/4000lm 3000K	1890lm																																																	
SENSE PRISM 3/4000lm 4000K	1960lm																																																	
SENSE PRISM 5000lm 3000K	1890lm																																																	
SENSE PRISM 5000lm 4000K	1960lm																																																	
SENSE OPAL 3/4000lm 3000K	2700lm																																																	
SENSE OPAL 3/4000lm 4000K	2800lm																																																	
SENSE OPAL 5000lm 3000K	2650lm																																																	
SENSE OPAL 5000lm 4000K	2750lm																																																	
SENSE PRISM 3/4000lm 3000K	2650lm																																																	
SENSE PRISM 3/4000lm 4000K	2750lm																																																	
SENSE PRISM 5000lm 3000K	2650lm																																																	
SENSE PRISM 5000lm 4000K	2750lm																																																	
300mA (14W) 550mA (25W) 12V 350mA (17W) 600mA (28W) 24V 400mA (19W) 650mA (31W) 450mA (22W)																																																		

NO: Kan kun installeres av en registrert installasjonsvirksomhet
 EN: Only to be installed by an authorized electrician
 FR: Doit être installé par un électricien autorisé
 NL: Mag alleen geïnstalleerd worden door een bevoegde elektricien
 DE: Dieses Produkt darf nur durch autorisiertes Personal (z. B. Elektro-Installateur) angeschlossen und in Betrieb genommen werden

Standard:

<input type="checkbox"/> ON 1 2 3 4 5 6	<table border="1"> <tr><td>SENSE OPAL 3/4000lm 3000K</td><td>2700lm</td></tr> <tr><td>SENSE OPAL 3/4000lm 4000K</td><td>2800lm</td></tr> <tr><td>SENSE OPAL 5000lm 3000K</td><td>2650lm</td></tr> <tr><td>SENSE OPAL 5000lm 4000K</td><td>2750lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 3000K</td><td>2650lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 4000K</td><td>2750lm</td></tr> <tr><td>SENSE PRISM 5000lm 3000K</td><td>2650lm</td></tr> <tr><td>SENSE PRISM 5000lm 4000K</td><td>2750lm</td></tr> </table>	SENSE OPAL 3/4000lm 3000K	2700lm	SENSE OPAL 3/4000lm 4000K	2800lm	SENSE OPAL 5000lm 3000K	2650lm	SENSE OPAL 5000lm 4000K	2750lm	SENSE PRISM 3/4000lm 3000K	2650lm	SENSE PRISM 3/4000lm 4000K	2750lm	SENSE PRISM 5000lm 3000K	2650lm	SENSE PRISM 5000lm 4000K	2750lm
SENSE OPAL 3/4000lm 3000K	2700lm																
SENSE OPAL 3/4000lm 4000K	2800lm																
SENSE OPAL 5000lm 3000K	2650lm																
SENSE OPAL 5000lm 4000K	2750lm																
SENSE PRISM 3/4000lm 3000K	2650lm																
SENSE PRISM 3/4000lm 4000K	2750lm																
SENSE PRISM 5000lm 3000K	2650lm																
SENSE PRISM 5000lm 4000K	2750lm																



Rev: 17.02.2017

CORPORATE OFFICE: SG Armaturen AS Svåbekk 15 4790 Lillesand NORGE Tlf:+47 37 50 03 00 firmapost@sg-as.no www.sg-as.no	BRANCH OFFICE: SG Lighting SA/NV Blokhuistraat 47 2800 Mechelen Noord I BELGIQUE/BELGIË Tlf:+32(0) 15 20 72 71 info.benelux@silighting.net www.silighting.net	BRANCH OFFICE: SG Armaturen A/S Egebakken 19 7400 Herning DANMARK Tlf:+45 70 70 72 13 info@sg-as.dk www.sg-as.dk	BRANCH OFFICE: SG Lighting SA/NV 73 rue de Saint Mandrier 83140 Six Fours Les Plages FRANCE Tlf:+33(0) 4 94 93 00 00 info.france@silighting.fr www.silighting.net	BRANCH OFFICE: SG Leuchten GmbH Postfach 67 04 21 22344 Hamburg GERMANY Tlf:+49 40 23 99 44 59 info@sg-leuchten.de www.sg-leuchten.de	BRANCH OFFICE: SG Armaturen AB August Barksg. 30B 421 32 Västra Frölunda SVERIGE Tlf:+46 31 81 71 10 info@sg-ab.se www.sg-ab.se
---------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------

Sense 4000lm Driver Kit Non Dim



30V DC, CC (Constant current) 1050mA

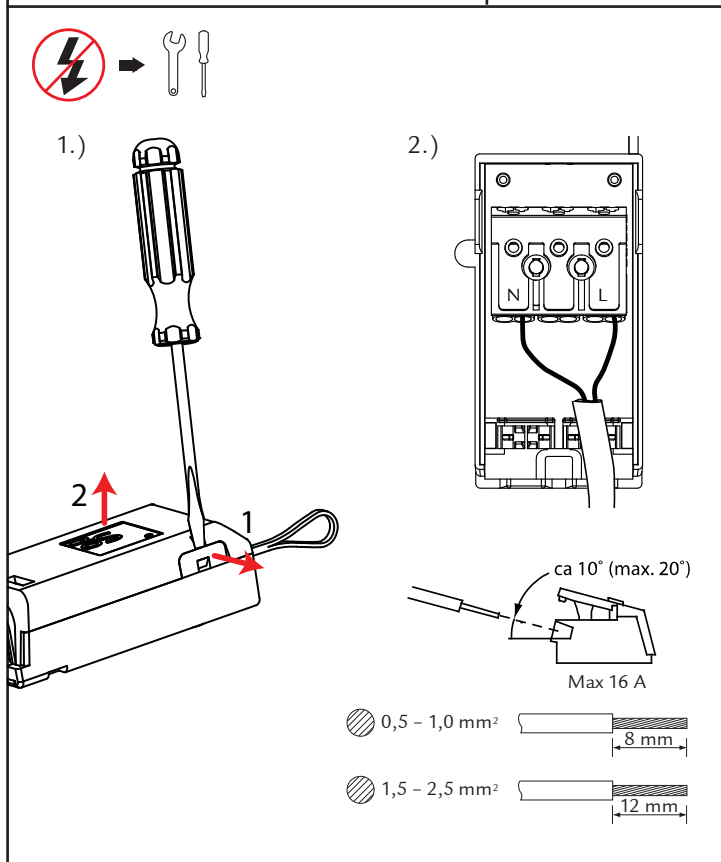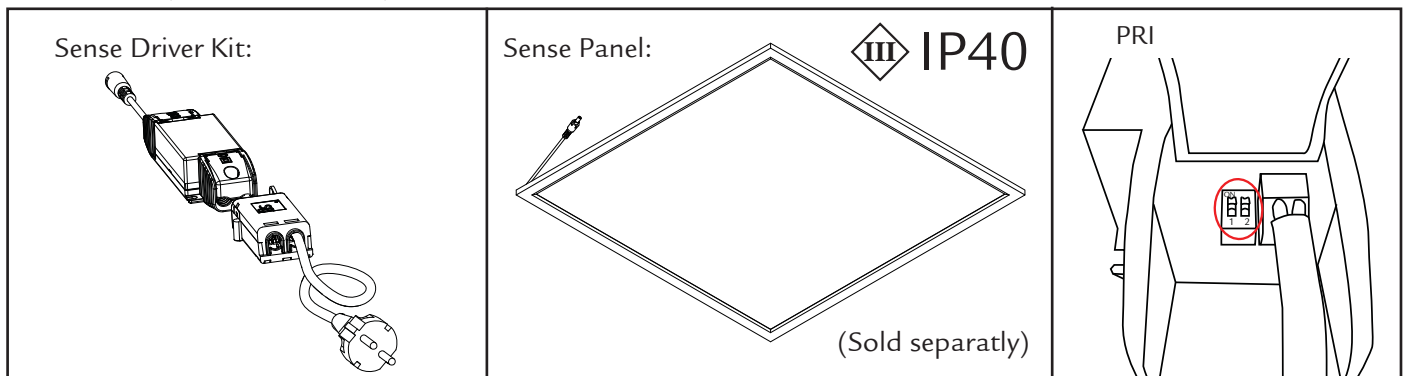

⚡

NO: Kan kun installeres av en registrert installasjonsvirksomhet
 EN: Only to be installed by an authorized electrician
 FR: Doit être installé par un électricien autorisé
 NL: Mag alleen geïnstalleerd worden door een bevoegde elektricien
 DE: Dieses Produkt darf nur durch autorisiertes Personal (z. B. Elektro-Installateur) angeschlossen und in Betrieb genommen werden

800 mA (34W)	900mA (38W)	950 mA (40W)	1050 mA (44W)																																																																
<input type="checkbox"/> ON 1 2	<input type="checkbox"/> ON 1 2	<input type="checkbox"/> ON 1 2	Standard: <input type="checkbox"/> ON 1 2																																																																
<table border="1"> <tr><td>SENSE OPAL 3/4000lm 3000K</td><td>3050lm</td></tr> <tr><td>SENSE OPAL 3/4000lm 4000K</td><td>3120lm</td></tr> <tr><td>SENSE OPAL 5000lm 3000K</td><td>2970lm</td></tr> <tr><td>SENSE OPAL 5000lm 4000K</td><td>3050lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 3000K</td><td>3010lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 4000K</td><td>3090lm</td></tr> <tr><td>SENSE PRISM 5000lm 3000K</td><td>2860lm</td></tr> <tr><td>SENSE PRISM 5000lm 4000K</td><td>2860lm</td></tr> </table>	SENSE OPAL 3/4000lm 3000K	3050lm	SENSE OPAL 3/4000lm 4000K	3120lm	SENSE OPAL 5000lm 3000K	2970lm	SENSE OPAL 5000lm 4000K	3050lm	SENSE PRISM 3/4000lm 3000K	3010lm	SENSE PRISM 3/4000lm 4000K	3090lm	SENSE PRISM 5000lm 3000K	2860lm	SENSE PRISM 5000lm 4000K	2860lm	<table border="1"> <tr><td>SENSE OPAL 3/4000lm 3000K</td><td>3430lm</td></tr> <tr><td>SENSE OPAL 3/4000lm 4000K</td><td>4100lm</td></tr> <tr><td>SENSE OPAL 5000lm 3000K</td><td>3520lm</td></tr> <tr><td>SENSE OPAL 5000lm 4000K</td><td>3430lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 3000K</td><td>3390lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 4000K</td><td>3470lm</td></tr> <tr><td>SENSE PRISM 5000lm 3000K</td><td>3210lm</td></tr> <tr><td>SENSE PRISM 5000lm 4000K</td><td>3210lm</td></tr> </table>	SENSE OPAL 3/4000lm 3000K	3430lm	SENSE OPAL 3/4000lm 4000K	4100lm	SENSE OPAL 5000lm 3000K	3520lm	SENSE OPAL 5000lm 4000K	3430lm	SENSE PRISM 3/4000lm 3000K	3390lm	SENSE PRISM 3/4000lm 4000K	3470lm	SENSE PRISM 5000lm 3000K	3210lm	SENSE PRISM 5000lm 4000K	3210lm	<table border="1"> <tr><td>SENSE OPAL 3/4000lm 3000K</td><td>3620lm</td></tr> <tr><td>SENSE OPAL 3/4000lm 4000K</td><td>3710lm</td></tr> <tr><td>SENSE OPAL 5000lm 3000K</td><td>3530lm</td></tr> <tr><td>SENSE OPAL 5000lm 4000K</td><td>3620lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 3000K</td><td>3570lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 4000K</td><td>3660lm</td></tr> <tr><td>SENSE PRISM 5000lm 3000K</td><td>3390lm</td></tr> <tr><td>SENSE PRISM 5000lm 4000K</td><td>3390lm</td></tr> </table>	SENSE OPAL 3/4000lm 3000K	3620lm	SENSE OPAL 3/4000lm 4000K	3710lm	SENSE OPAL 5000lm 3000K	3530lm	SENSE OPAL 5000lm 4000K	3620lm	SENSE PRISM 3/4000lm 3000K	3570lm	SENSE PRISM 3/4000lm 4000K	3660lm	SENSE PRISM 5000lm 3000K	3390lm	SENSE PRISM 5000lm 4000K	3390lm	<table border="1"> <tr><td>SENSE OPAL 3/4000lm 3000K</td><td>4000lm</td></tr> <tr><td>SENSE OPAL 3/4000lm 4000K</td><td>4100lm</td></tr> <tr><td>SENSE OPAL 5000lm 3000K</td><td>3900lm</td></tr> <tr><td>SENSE OPAL 5000lm 4000K</td><td>4000lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 3000K</td><td>3950lm</td></tr> <tr><td>SENSE PRISM 3/4000lm 4000K</td><td>4050lm</td></tr> <tr><td>SENSE PRISM 5000lm 3000K</td><td>3750lm</td></tr> <tr><td>SENSE PRISM 5000lm 4000K</td><td>3750lm</td></tr> </table>	SENSE OPAL 3/4000lm 3000K	4000lm	SENSE OPAL 3/4000lm 4000K	4100lm	SENSE OPAL 5000lm 3000K	3900lm	SENSE OPAL 5000lm 4000K	4000lm	SENSE PRISM 3/4000lm 3000K	3950lm	SENSE PRISM 3/4000lm 4000K	4050lm	SENSE PRISM 5000lm 3000K	3750lm	SENSE PRISM 5000lm 4000K	3750lm
SENSE OPAL 3/4000lm 3000K	3050lm																																																																		
SENSE OPAL 3/4000lm 4000K	3120lm																																																																		
SENSE OPAL 5000lm 3000K	2970lm																																																																		
SENSE OPAL 5000lm 4000K	3050lm																																																																		
SENSE PRISM 3/4000lm 3000K	3010lm																																																																		
SENSE PRISM 3/4000lm 4000K	3090lm																																																																		
SENSE PRISM 5000lm 3000K	2860lm																																																																		
SENSE PRISM 5000lm 4000K	2860lm																																																																		
SENSE OPAL 3/4000lm 3000K	3430lm																																																																		
SENSE OPAL 3/4000lm 4000K	4100lm																																																																		
SENSE OPAL 5000lm 3000K	3520lm																																																																		
SENSE OPAL 5000lm 4000K	3430lm																																																																		
SENSE PRISM 3/4000lm 3000K	3390lm																																																																		
SENSE PRISM 3/4000lm 4000K	3470lm																																																																		
SENSE PRISM 5000lm 3000K	3210lm																																																																		
SENSE PRISM 5000lm 4000K	3210lm																																																																		
SENSE OPAL 3/4000lm 3000K	3620lm																																																																		
SENSE OPAL 3/4000lm 4000K	3710lm																																																																		
SENSE OPAL 5000lm 3000K	3530lm																																																																		
SENSE OPAL 5000lm 4000K	3620lm																																																																		
SENSE PRISM 3/4000lm 3000K	3570lm																																																																		
SENSE PRISM 3/4000lm 4000K	3660lm																																																																		
SENSE PRISM 5000lm 3000K	3390lm																																																																		
SENSE PRISM 5000lm 4000K	3390lm																																																																		
SENSE OPAL 3/4000lm 3000K	4000lm																																																																		
SENSE OPAL 3/4000lm 4000K	4100lm																																																																		
SENSE OPAL 5000lm 3000K	3900lm																																																																		
SENSE OPAL 5000lm 4000K	4000lm																																																																		
SENSE PRISM 3/4000lm 3000K	3950lm																																																																		
SENSE PRISM 3/4000lm 4000K	4050lm																																																																		
SENSE PRISM 5000lm 3000K	3750lm																																																																		
SENSE PRISM 5000lm 4000K	3750lm																																																																		

Rev: 17.02.2017

CORPORATE OFFICE: SG Armaturen AS Svåbekk 15 4790 Lillesand NORGE Tlf:+47 37 50 03 00 firmapost@sg-as.no www.sg-as.no	BRANCH OFFICE: SG Lighting SA/NV Blokhuistraat 47 2800 Mechelen Noord I BELGIQUE/BELGIË Tlf:+32(0) 15 20 72 71 info.benelux@sglighting.net www.sglighting.net	BRANCH OFFICE: SG Armaturen A/S Egebakken 19 7400 Herning DANMARK Tlf:+45 70 70 72 13 info@sg-as.dk www.sg-as.dk	BRANCH OFFICE: SG Lighting SA/NV 73 rue de Saint Mandrier 83140 Six Fours Les Plages FRANCE Tlf:+33(0) 4 94 93 00 00 info.france@sglighting.fr www.sglighting.net	BRANCH OFFICE: SG Leuchten GmbH Postfach 67 04 21 22344 Hamburg GERMANY Tlf:+49 40 23 99 44 59 info@sg-leuchten.de www.sg-leuchten.de	BRANCH OFFICE: SG Armaturen AB August Barksg. 30B 421 32 Västra Frölunda SVERIGE Tlf:+46 31 81 71 10 info@sg-ab.se www.sg-ab.se
---------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------

Sense 4000lm Driver Kit DALI



30V DC, CC (Constant current) 1050mA

Sense Driver Kit:

Sense Panel:

IP40

(Sold separately)

1.)

2.) DALI BUS
L
N

ca 10° (max. 20°)
Max 16 A

0,5 - 1,0 mm² 8 mm
 1,5 - 2,5 mm² 12 mm

350mA (20W)

ON

1	2	3	4	5	6
---	---	---	---	---	---

SENSE OPAL 3/4000lm 3000K	1330lm
SENSE OPAL 3/4000lm 4000K	1370lm
SENSE OPAL 5000lm 3000K	1300lm
SENSE OPAL 5000lm 4000K	1330lm
SENSE PRISM 3/4000lm 3000K	1320lm
SENSE PRISM 3/4000lm 4000K	1350lm
SENSE PRISM 5000lm 3000K	1250lm
SENSE PRISM 5000lm 4000K	1250lm

700mA (40W)

ON

1	2	3	4	5	6
---	---	---	---	---	---

SENSE OPAL 3/4000lm 3000K	2670lm
SENSE OPAL 3/4000lm 4000K	2730lm
SENSE OPAL 5000lm 3000K	2600lm
SENSE OPAL 5000lm 4000K	2670lm
SENSE PRISM 3/4000lm 3000K	2630lm
SENSE PRISM 3/4000lm 4000K	2700lm
SENSE PRISM 5000lm 3000K	2500lm
SENSE PRISM 5000lm 4000K	2500lm

1050mA (40W)

ON

1	2	3	4	5	6
---	---	---	---	---	---

SENSE OPAL 3/4000lm 3000K	4000lm
SENSE OPAL 3/4000lm 4000K	4100lm
SENSE OPAL 5000lm 3000K	3900lm
SENSE OPAL 5000lm 4000K	4000lm
SENSE PRISM 3/4000lm 3000K	3950lm
SENSE PRISM 3/4000lm 4000K	4050lm
SENSE PRISM 5000lm 3000K	3750lm
SENSE PRISM 5000lm 4000K	3750lm

Standard:

1	2	3	4	5	6
---	---	---	---	---	---

SENSE OPAL 3/4000lm 3000K	4000lm
SENSE OPAL 3/4000lm 4000K	4100lm
SENSE OPAL 5000lm 3000K	3900lm
SENSE OPAL 5000lm 4000K	4000lm
SENSE PRISM 3/4000lm 3000K	3950lm
SENSE PRISM 3/4000lm 4000K	4050lm
SENSE PRISM 5000lm 3000K	3750lm
SENSE PRISM 5000lm 4000K	3750lm

400mA (23W)	750mA (40W)
500mA (29W)	800mA (40W)
550mA (32W)	850mA (40W)
600mA (35W)	900mA (40W)
650mA (37,5W)	950mA (40W)

NO: Kan kun installeres av en registrert installasjonsvirksomhet
 EN: Only to be installed by an authorized electrician
 FR: Doit être installé par un électricien autorisé
 NL: Mag alleen geïnstalleerd worden door een bevoegde elektricien
 DE: Dieses Produkt darf nur durch autorisiertes Personal (z. B. Elektro-Installateur) angeschlossen und in Betrieb genommen werden





Rev: 17.02.2017

CORPORATE OFFICE: SG Armaturen AS Svåbekk 15 4790 Lillesand NORGE Tlf:+47 37 50 03 00 firmapost@sg-as.no www.sg-as.no	BRANCH OFFICE: SG Lighting SA/NV Blokhuistraat 47 2800 Mechelen Noord I BELGIQUE/BELGIË Tlf:+32(0) 15 20 72 71 info.benelux@sglighting.net www.sglighting.net	BRANCH OFFICE: SG Armaturen A/S Egebakken 19 7400 Herning DANMARK Tlf:+45 70 70 72 13 info@sg-as.dk www.sg-as.dk	BRANCH OFFICE: SG Lighting SA/NV 73 rue de Saint Mandrier 83140 Six Fours Les Plages FRANCE Tlf:+33(0) 4 94 93 00 00 info.france@sglighting.fr www.sglighting.net	BRANCH OFFICE: SG Leuchten GmbH Postfach 67 04 21 22344 Hamburg GERMANY Tlf:+49 40 23 99 44 59 info@sg-leuchten.de www.sg-leuchten.de	BRANCH OFFICE: SG Armaturen AB August Barksg. 30B 421 32 Västra Frölunda SVERIGE Tlf:+46 31 81 71 10 info@sg-ab.se www.sg-ab.se
---------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------------	-------------------------------------------------------------------------------------------------------------------------------------------------------------

Sense 5000lm Driver Kit Non Dim



30V DC, CC (Constant current) 1400mA

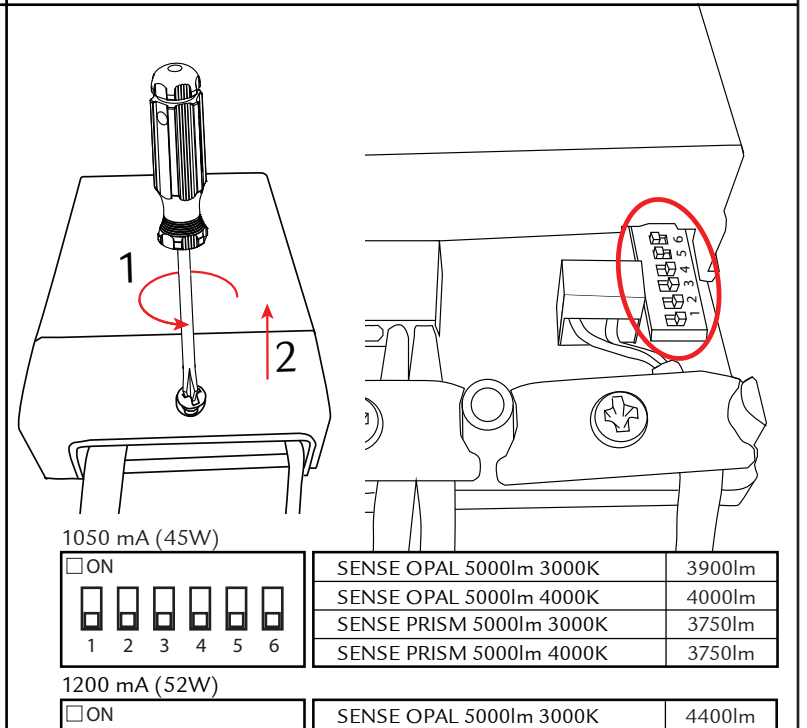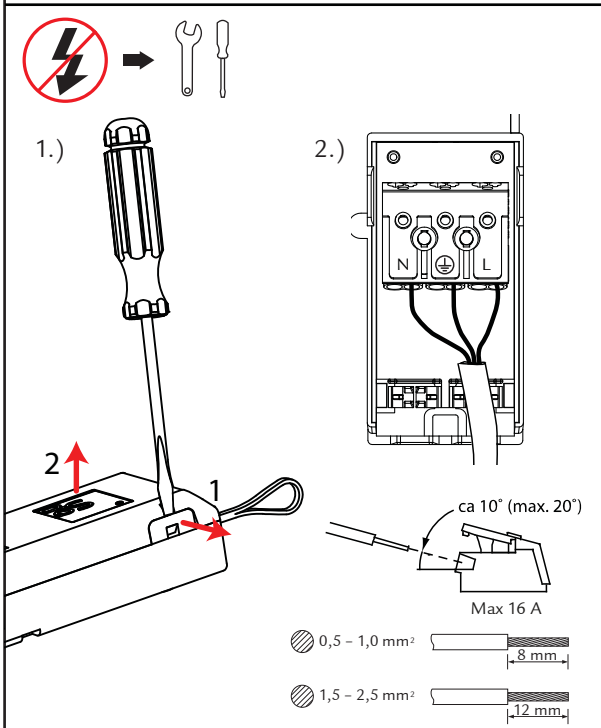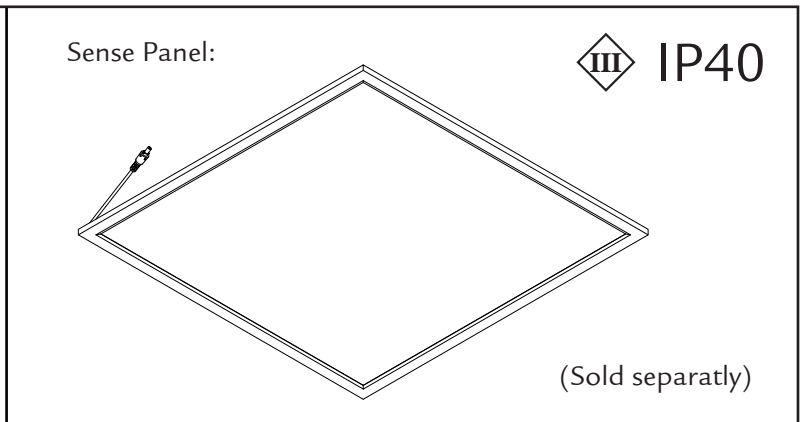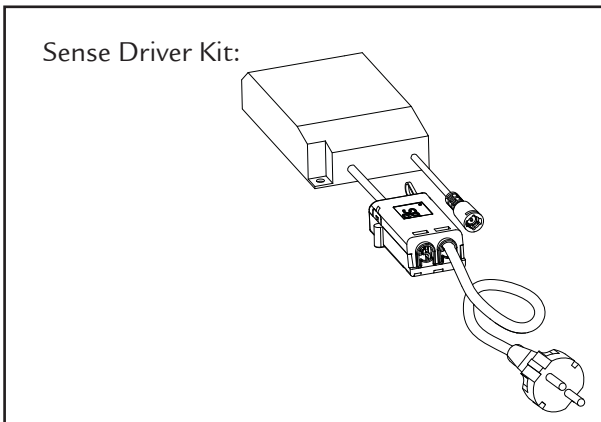

NO: Kan kun installeres av en registrert installasjonsvirksomhet

EN: Only to be installed by an authorized electrician

FR: Doit être installé par un électricien autorisé

NL: Mag alleen geïnstalleerd worden door een bevoegde elektricien

DE: Dieses Produkt darf nur durch autorisiertes Personal (z. B. Elektro-Installateur) angeschlossen und in Betrieb genommen werden

Standard:

~~1600mA~~

~~1750mA~~

~~2100mA~~

~~48V~~

CORPORATE OFFICE:
SG Armaturen AS
 Svåbekk 15
 4790 Lillesand
 NORGE
 Tlf:+47 37 50 03 00
 firmapost@sg-as.no
 www.sg-as.no

BRANCH OFFICE:
 SG Lighting SA/NV
 Blokhuisstraat 47
 2800 Mechelen Noord I
 BELGIQUE/BELGIË
 Tlf:+32(0) 15 20 72 71
 info.benelux@silighting.net
 www.silighting.net

BRANCH OFFICE:
 SG Armaturen A/S
 Egebakken 19
 7400 Herning
 DANMARK
 Tlf:+45 70 70 72 13
 info@sg-as.dk
 www.sg-as.dk

BRANCH OFFICE:
 SG Lighting SA/NV
 73 rue de Saint Mandrier
 83140 Six Fours Les Plages
 FRANCE
 Tlf:+33(0) 4 94 93 00 00
 info.france@silighting.fr
 www.silighting.net

BRANCH OFFICE:
 SG Leuchten GmbH
 Postfach 67 04 21
 22344 Hamburg
 GERMANY
 Tlf:+49 40 23 99 44 59
 info@sg-leuchten.de
 www.sg-leuchten.de

BRANCH OFFICE:
 SG Armaturen AB
 August Barksg. 30B
 421 32 Västra Frölunda
 SVERIGE
 Tlf:+46 31 81 71 10
 info@sg-ab.se
 www.sg-ab.se

Rev: 17.02.2017

Sense 5000lm Driver Kit DALI



30V DC, CC (Constant current) Max:1400mA

Sense Driver Kit:

Sense Panel:

IP40

(Sold separately)

1.)

2.)

ca 10° (max. 20°)

Max 16 A

0,5 - 1,0 mm² 8 mm

1,5 - 2,5 mm² 12 mm

1050 mA (45W)		<input type="checkbox"/> ON	SENSE OPAL 5000lm 3000K	3900lm
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	SENSE OPAL 5000lm 4000K	4000lm
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	SENSE PRISM 5000lm 3000K	3750lm
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	SENSE PRISM 5000lm 4000K	3750lm

1200 mA (52W)		<input type="checkbox"/> ON	SENSE OPAL 5000lm 3000K	4290lm
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	SENSE OPAL 5000lm 4000K	4370lm
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	SENSE PRISM 5000lm 3000K	3860lm
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	SENSE PRISM 5000lm 4000K	3940lm

1400 mA (55W)		<input type="checkbox"/> ON	SENSE OPAL 5000lm 3000K	5000lm
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	SENSE OPAL 5000lm 4000K	5100lm
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	SENSE PRISM 5000lm 3000K	4500lm
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	SENSE PRISM 5000lm 4000K	4600lm

NO: Kan kun installeres av en registrert installasjonsvirksomhet

EN: Only to be installed by an authorized electrician

FR: Doit être installé par un électricien autorisé

NL: Mag alleen geïnstalleerd worden door een bevoegde elektricien

DE: Dieses Produkt darf nur durch autorisiertes Personal (z. B. Elektro-Installateur) angeschlossen und in Betrieb genommen werden

Standard:

~~1600mA~~

~~1750mA~~

~~2100mA~~

~~48V~~

CORPORATE OFFICE:	BRANCH OFFICE:	BRANCH OFFICE:	BRANCH OFFICE:	BRANCH OFFICE:	BRANCH OFFICE:
SG Armaturen AS	SG Lighting SA/NV	SG Armaturen A/S	SG Lighting SA/NV	SG Leuchten GmbH	SG Armaturen AB
Skytterheia 25	Blokhuisstraat 47	Egebakken 19	73 rue de Saint Mandrier	Postfach 67 04 21	August Barksg. 30B
4790 Lillesand	2800 Mechelen Noord I	7400 Herning	83140 Six Fours Les Plages	22344 Hamburg	421 32 Västra Frölunda
NORGE	BELGIQUE/BELGIË	DANMARK	FRANCE	GERMANY	SVERIGE
Tlf:+47 37 50 03 00	Tlf:+32(0) 15 20 72 71	Tlf:+45 70 70 72 13	Tlf:+33(0) 4 94 93 00 00	Tlf:+49 40 23 99 44 59	Tlf:+46 31 81 71 10
firmapost@sg-as.no	info.benelux@silighting.net	info@sg-as.dk	info.france@silighting.fr	info@sg-leuchten.de	info@sg-ab.se
www.sg-as.no	www.silighting.net	www.sg-as.dk	www.silighting.net	www.sg-leuchten.de	www.sg-ab.se

Rev: 05.12.2017